

Folding Instructions Safari Tilt

Important Information

Folding Instructions



Caution: Keep fingers free of folding mechanism.



TIP: The Safari Tilt MUST be fully upright and in a locked position before folding.



SPECIAL INSTRUCTIONS FOR 3" LEGREST EXTENSION:

Legs must be slightly elevated to allow for proper folding. When unfolding, raise the ELR's* to a 180° angle (parallel to the push handles).

*ELR = Elevating Legrest



STEP 1

Place foot on rear lock brace and bring the chair to the most upright position (until you hear a "click").



STEP 2

Flip up armrests.



STEP 3

Remove seat cushion.



STEP 4

Swing footplates to the side.

Note: One-piece footplate must be removed from chair before folding.



STEP 5

Unlock rear lock brace by pushing up on center of brace with foot.



STEP 6

Lean chair back on push handles and lower chair to ground. Walk to front of chair and push down on tubing above front tires until chair is folded.





STEP 8

Fasten the closure strap. Do not use the closure strap to carry.

Unfolding Instructions



STEP 1

Unfasten closure strap.



Pull up on the slide locks and raise the ELR's until they are at a 90 – 180 degree angle to the folded chair.





STEP 3

Stand the folded chair vertically on rear wheels. Grasp the push handle closest to you and at the same time push down on the ELR closest to you using a forward motion.



STEP 4

Push down with your foot on the rear lock brace until it is in the locked position.



STEP 5

Attach the seat cushion by pushing firmly into the back of seat, then pressing down onto Velcro $\ensuremath{\mathfrak{B}}$.



STEP 6

Flip down armrests.



STEP 7

Swing footplates forward.