



Sticker Placement Guide

For Technical Support:
Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com

Jumbo Switch- #787-R, Y, B, G, & P (Set of 5 Switches) #789

USER'S GUIDE


Enabling Devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

This jumbo switch is an improved version of similar round switches. We have also made the mounting plate detachable since many users do not need the plate. Size: 5 1/8"Diameter x 1"H.

Operation:

1. The Jumbo Switch does **not** require any batteries to operate.
2. Plug the Jumbo Switch into the jack on your switch-adapted toy/device.
3. If it is necessary for you to use an adapter, make sure that you use a MONO adapter, not a STEREO adapter.
4. Make sure that the connection between the Jumbo Switch and your toy/device is tight. There should be no gaps.
5. Simply press anywhere on the Jumbo Switch's colored top to activate your toy/device.
6. The toy/device will only remain activated while the Jumbo Switch continues to be actuated. Once you release the switch, the toy/device will turn off.

Mounting Plate Options:

The Jumbo Switch has a removable mounting base option. To use without the base, simply remove the two small Phillips Head screws holding the base from sides of the switch body. Included are a set of 9 self-adhesive Non-Skid feet. When using the Jumbo Switch without the base only 3 feet are needed. (See Photo for proper placement). If using with the base all 9 feet are needed. (See Photo).

Troubleshooting:

Problem: The Jumbo Switch does not activate your toy/device.

Action #1: Make sure that the connection between the Jumbo Switch and your toy/device is tight. There should be **no** gaps. This is a common error and an easy fix.

Action #2: Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

Action #3: Try a different adapter (if applicable) to rule this out as the source of the problem.

Care of Unit:

The Jumbo Switch can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Rev 7/28/10