
Light-Up Gel Switch #7452

USER'S GUIDE



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com

Reach Out!

Press this soft, sparkly gel pad switch and the pad will light up while the switch activates your adapted device. Bright, attention-getting switch gets every user to reach out and engage in activities. Size: 7"L x 6"W x 2"H. Requires 2 AA Batteries. Weight: 1 lb.

Operation:

1. The Light-Up Gel Switch requires 2 AA batteries to operate (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Gently turn the unit over to face the black battery compartment cover. Carefully remove the small screw from the battery compartment cover using a Phillips head screwdriver, and lift the cover off. Observing proper (+) & (-) battery polarity, install 2 AA size batteries into the holder. Replace the battery compartment cover and screw.
3. Turn the ON/OFF switch to ON.
4. Plug the Light-Up Gel Switch into the jack on your switch-adapted toy/device. Make sure your switch is plugged in all the way. There should be no gaps.
5. Simply press anywhere on the Light-Up Gel Switch top to activate its illumination and your connected toy/device.
6. The illumination and toy/device will only remain activated while the Light-Up Gel Switch continues to be actuated. Once you release the switch, the illumination and toy/device will turn OFF. The Light-Up Gel Switch can be used as a sensory stimulating toy on its own. You can also use it as a switch without the illumination.

Important Note:

For prolonged storage we recommend removing the batteries. This switch will not work if the batteries are removed, weak or dead. Batteries are needed for switch to work.

Troubleshooting:

Problem: The Light-Up Gel Switch does not activate your toy/device.

Action #1: Make sure that your switch is plugged in all the way. There should be *no* gaps. This is a common error and an easy fix.

Action #2: Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

Action #3: Make sure the batteries are fresh; this switch will not work without batteries.

Care of Unit:

The Light-Up Gel Switch can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.