SleepSafer Articulated

(HIGH BED) ASSEMBLY GUIDE



Thank you for purchasing the SleepSafe Safety Bed. With proper care, your bed will provide years of safe use. Carefully unpack all the contents of your bed and verify that all parts are included using the following pages.



PLEASE CHECK ALL BOXES FOR HARDWARE BEFORE DISCARDING

WARRANTY AND USER INFORMATION CAN BE FOUND AT THE END OF THESE INSTRUCTIONS

TOOLS NEEDED:



4mm Allen Wrench (Provided)



Flat-Head Screwdriver



3/8" Wrench



At least 2 People

Table of Contents



3

Included Items

(Included Items necessary for Bed Assembly)

5

Bed Assembly Guide

(Detailed Instructions for Assembling your Bed)

9

Additional Equipment

(Extension/Topper Assembly Guide)

13

Safety Rail Adjustment (Detailed Instructions for Adjusting Safety Rails)

15

Warranty Information

Included Items:



<i>h</i>		
CONTRACTOR OF THE PERSON OF TH	90mm Allen Bolt	x16
	Alignment Pin	x2
	¾" Hex Bolt	x8
	Barrel Nut (Preinstalled on padded beds)	x16
	Cardboard Spacer	x4
	¼" Allen Wrench	x1
	4mm Allen Wrench	x1
	T15 Torx Wrench	x1
	T10 Torx Wrench	x1

Included Items: (continued)





Assembly Guide





Side-Rails include the Front Panel and one of the Back Panels (the one with bronze inserts to attach to the frame).



Set Spacers at least 6" away from attachment points to leave room to attach side rails.


Assembly Guide (continued) Sleep Safe Beds





Assembly Guide (continued)



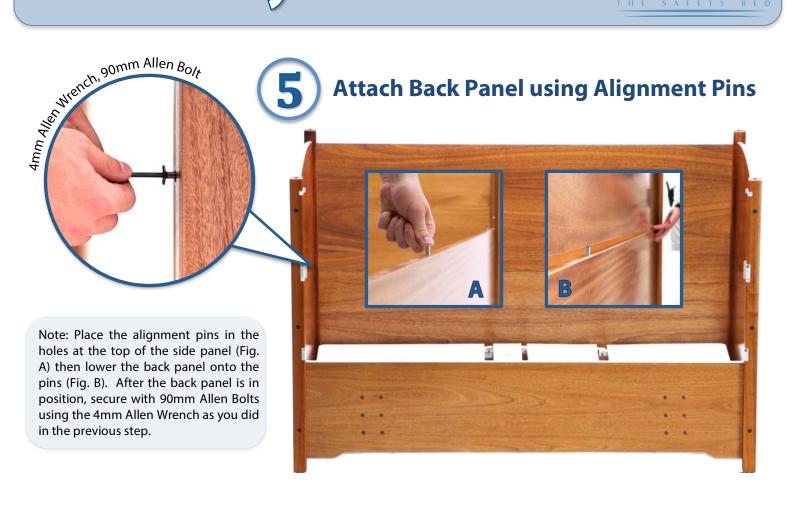



Assembly Guide (continued)







Included Items:



90mm Allen Bolt

x12

4mm Allen Wrench

x1


Curved End Piece

x2



Extension Side Rail

x2

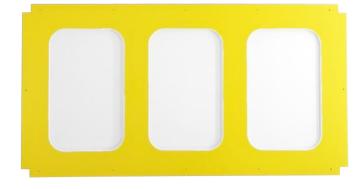

Topper (Optional)

x1

Allen Screws
(w/ Topper Only)

x12





Set Extension Side Rails on Top of Legs:

You will be assembling the Extension upside-down





Attach Extension Ends to Side Rails:

Attach Ends with Curve Up (smiling) using the 90mm Allem Bolts and 4mm Allen Wrench provided:










If you don't have a Topper, skip Step #4:

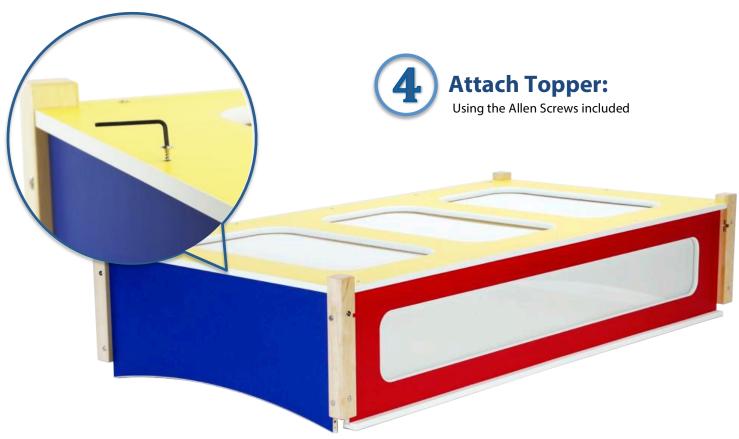





6 Assemble SleepSafer®/Extension Combo

Set Extension on top of your SleepSafer® Bed. Insert one 90mm Allen Bolt into each of the four vacant holes at the top of the legs and tighten using the 4mm Allen Wrench provided (Shown by "B" above). Tighten all bolts and your SleepSafer®/Extension Assembly is complete!

Safety Rail Adjustment (UP AND DOWN)



*Each Safety Rail is pre-adjusted at our factory, but it may become necessary to adjust the Safety Rail height over time.

TOOLS NEEDED:



(Provided)





T15 Torx Wrench (Provided)

Rubber Malle (or Hammer)



Determine if your Safety Rails need adjustment:

Look at each brass locking-pin when the Safety Rail is in the locked position as indicated by "A" in Fig. 1. The pin should be <u>centered</u> in the hole of the plastic strike. If it is not, note which way the rail needs to move (up or down).



Remove Plastic Strikes:

Using your Hammer or Rubber Mallet, gently tap the plastic strike out of place and remove it from the leg.


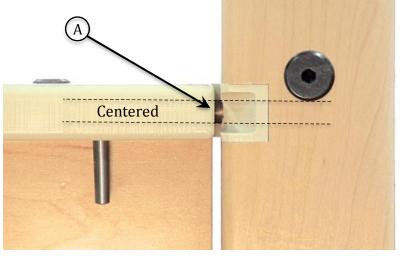


Fig. 1

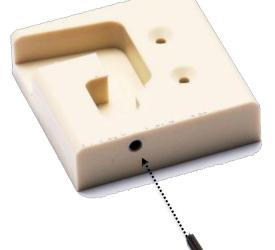

3 Adjust Accordingly:

Insert the T10 Torx Wrench as shown in Fig. 2. Adjust the screw up or down depending on which way you noted in Step 1.

(Clockwise = Up / Counterclockwise = Down)

Reinsert Plastic Strike:

Place the Plastic Strike back into position and align by gently tapping it with your Rubber Mallet.

Fig. 2

Safety Rail Adjustment (SIDETO SIDE)



*Each Safety Rail is pre-adjusted at our factory, but it may become necessary to adjust the Safety Rail height over time.

1 Determine if your Safety Rails need adjustment:

With the safety rail in the locked position, check the spacing between the end of the



Remove Safety Rail and Adjust Accordingly:



The Articulated Remote SleepSafe Beds





The SleepSafe Articulated Remote operates using a cordless RF (Radio Frequency) handset (shown above). This means the handset does not need to be pointed at the bed to operate. This is a convenient feature, but be aware: The handset can operate the bed from another room, out of sight of the patient in the bed.

*If the handset indicator lights up, but the bed does not operate, try changing the position of the channel switch on the end of the remote. This should only be an issue the first time you use your bed.

^{**} The handset requires 3 "AAA" Batteries. Replace the batteries whenever the bed responds in an unusual manner.

Warranty Information





Full One-Year Warranty:

The SleepSafe[™] Bed is warranted against defects in workmanship or materials for a period of one year from the date of purchase. SleepSafe Beds will repair any defective part at no cost to the purchaser.



Limited Five-Year Warranty:

During the second through fifth years from the date of purchase, SleepSafe Beds will replace any part found to be defective. Purchaser shall pay any service and shipping costs related to the replacement of the defective part.



Terms and Conditions:

This warranty applies to normal use and does not cover any damage caused by normal wear, abuse, misuse, mishandling or modification of the product.

^{*}Safety Rails are intended to hinder or discourage the possibility of a roll-out. This product does not take the place of proper client supervision and monitoring. Any modification to the product or its components will void the warranty and render the product incapable of fulfilling its intended purpose.

